

# HD DVR Watch Manual

Thank you for purchasing Videsur Watch DVR product, this manual will guide you through the proper use of this product and affiliated with the product application. When you use this product and affiliated with the product application, please read the instructions carefully to ensure you can correctly and easily operate the product.

## 1. Shape and button

( Remark: This picture only for reference)

1. Switch Key: Video-photo-AV
2. USB port
3. Power Key: Long time press for turn on/off, short time press for Video/picture/AV playback
4. Camera
5. Status Indicator
6. Mic hole
7. Time Adjustment
8. Day calendar
9. Week calendar

## 2. Parameters

Item	Parameters
Video format	AVI
Video encoding	M-JPEG
Video resolution	1920*1080
Media playing software	Attached software of the operating system or Mainstream audio and video media playing software, recommend Km player
Picture format	JPG
The ratio of image	16:9
Supporting system	Windows me/2000/xp/2003/vista, Mac OS10.4 (uncertainty, depends on the computer model)
charge pressure	DC-5V
Interface type	Mini 4 Pin USB
Storage support	Nand flash
Battery type	high-capacity lithium polymer
Working time	60 mins
Interface type	USB 2.0
Storage support	micro SD card
Battery type	Japanese quartz movement
Watch movement	High-capacity lithium polymer
Watch case	Alloy shell

Watch strap	Steel strap

### 3. Operating Instructions

#### Note before using:

This product is a precision electronic components within the composition, operation, do not touch strong action to prevent damage to keys, if not read disk, please unplug the USB cable out a little bit, red and blue lights then can be connected to a computer.

Use PC camera (video camera) function, install the driver with a random distribution. Recommendation: computer connection, first line and watch the data connection, then connect the computer.

Use PC camera (video camera) function, install the drivers which equipped with.

Recommendation: when connect computer, please connect the data lines with the watch, then connect the computer!

1. Video: In the off state, press the "operation button" for about 2 seconds, the red / blue dual-lamp light then the blue long time light that indicate the machine is in recording standby mode at this time; short press " operation button ", blue light flashing that is taking video, during video, press the " operation button " which is stopping recording and automatically save, press again to restart recording.( Note:you have to turn the knob on the crown of microphone anticlockwise to open the sound hole for camera and voice recording function.)

2. Camera operation: In the power off state, press the " operation button "then Start blue light long time, short time press "Mode button" one time, the blue light off the red light camera that this time the machine is in standby mode; short press the " Mode button "then the blue lights flash one time, indicating take a photograph and successfully saved.

3. AV playback operation: First, the attachment distribution of the dedicated AV cable to the corresponding interface into the TV, regulation to the state of AV receiver in the TV; then at the state of turned off, long time press the " operation button ",the watch turn on which blue light for long time, shortly press two times "Mode button" then the red and blue lights at the same time to indicate that the AV playback time in standby mode, If the AV cable is connected correctly you can see on the television replay of the machine output standby screen, this time frame shows a preview of the final document; if the current preview the video file, Press "Mode button" short time, then started the current video file playback on TV, while the machine alternately flashing red light blue light that is at this time playback, In this time, press the "operation button" to stop playing; stop status, press "Mode button" long time then Select a file and preview the next. Short time Press "Mode button" exit AV playback mode, and switch to video mode.

(Note: If insufficient disk space which red and blue lights flash, about five seconds after the camera will automatically shut down.

4. The combination of reset: This machine is a special reset function key combinations, such as system halted please hold down the "Mode button" and then "Operation button" to reset the machine.

### 4. Low battery and charging work

1. Low Battery: When take video or pictures, if the battery low while the red and blue light red light will flash, then the camera will automatically shutdown, before the system off it will automatically save the file to ensure document security.

2. Charging: USB connected items connected to a computer or charger can recharge the camera, when the battery is charging, the red and blue lights lit for long time, when the red lights went out long bright blue light, charging fully.

3. The charge of work: in charging, you can press "Mode button" to enter the side of charging while working condition. At this time the red light off the blue light, in a recording standby state, then the same with the normal boot operation.

**Note:** The camera built-in high-capacity polymer lithium battery, no memory effect, can be used with the charge, but the initial use of the first five, and then charge the battery to run out of capacity, to start the battery maximum capacity, access to standard working time.

## 5. The computer connection, web camera, the time set

1. U disk: Good Connection with the computer through the USB cable then in my computer a "removable disk" drive, U disk to use the machine same as.
2. The network camera: in the machine turned on the computer through the USB cable and a good connection, my computer will appear Standard Camera, the machine used as a webcam.
3. Set the recording time: the camera provides a video file in the function of recording time is displayed in the format: year - month - day hour: minutes: seconds, set the time as follows:  
Machine in good connection with computer through the USB cable. My computer in "removable disk" drive. Open the attachment in Windows software, Word Pad or Notepad (\* txt format) Input: 2010/05/05 12:59:30 take the file name: time.txt  
Save the file in the root directory of the removable hard drive, the USB cable connection cut off, then start recording, the time and date in lower right corner of the video and pictures will the currently time and date.  
You can also use the machine to update the file stored in the WriteTime.exe recording time, the method for the first unit is connected to the computer, double-click WriteTime.exe, in the mid-point jump to 'update window' then press that can be ok.

## 6. Operation method for waterproof function:

screw the knob on the crown of microphone clockwise until tight,in this case,waterproof function can be used(note:voice recording function can not be used while the watch is in a state of waterproof.)

## 7. Operation method of clock adjustment knob:

There are three ways to adjust the crown

Part(1):The normal work position of watch

Part(2):To the watch without calendar,that position is for adjusting the time.To the watch

With calendar,that position has two functions:A-Turning the handhold by clockwise

To adjust the week calendar, B-Turning the handhold by anticlockwise to adjust

The day calendar

Part(3):Only for the watch with calendar to adjust the time

## 8. Warning:

- Set usage scenarios: Please strictly abide by relevant state laws, this product can not be used for any unlawful purpose, the user is fully responsible for its using purpose.
- Battery: With the growth in use of time, battery life be shortened, long unused, in the fully charged before use.
- Player, the actual capacity of slightly less than the nominal capacity, is a normal phenomenon.

- File Security: This product is not a professional storage device. It does not guarantee the integrity and security of saved files. Please back up your important documents on the computer or other storage device timely.
- Video quality: This product is non-professional video equipment, recording documents does not guarantee the results to achieve your expectations.
- Operating temperature: 0-40 °C.
- Humidity: 20% -80%, do not place a wet environment, the product does not have waterproof.
- Shooting illumination: a well-lit environments, do not please the camera directly to the sun and other strong light source to avoid damage by optical devices.
- Cleaning: Do not dust density is too large to use the environment to avoid dust contamination of the lens and other components affect the camera effects, the lens can use lens cleaning paper or cloth to gently wipe the glasses to keep clean
- Other matters: this product is precision electronic products, please do not subject it to strong impact or vibration: Do not use strong magnetic or electric field
- Disposal: Please note that environmental protection, not free to discard the product. Prohibit the throwing of this product in a fire to avoid explosion.