

## Button operation (5 keys, Please notice as following illustration)



### Notice:

- 1) Short-time pressing: the pressing time is less than 2 seconds.
- 2) Long-time pressing: the pressing time is more than 2 seconds.

### The function introduction:

The digital sunglasses is for the success and the stylish man. Suitable for: students take notes in class video, travelers take video of human landscape, journalists take an instant news, traffic police recorded violations illegal. For people to record their daily drip of all the contents of the negotiations to prevent an "empty with no".

- Support Video record function, The vidicon quality is high clear, without delay, play smoothly. Save Video files as AVI format.

2

- Support MP3/MIDI/WMA/WAV/AAC/ASF/MTV/AVI/VOB/DAT/MPG/3GP and other music format.
- High-quality digital radio supports automatic and manual channels searching, and support European and Japan two modes to facilitate operation;
- Support PC camera and Lan Vidicon function (MSN, Skype). USB high-speed 2.0 transference, and U-disk function.
- Power saving: automatic power off when in the pause state after 1 second.

### Mp3 model Operation:

- ON: In power off state, short-time press button, The Led light is from yellow to blue and blinking, To enter into the MP3 playing status automatically.
- Track: Short-time press or button, To select previous or next song.
- Volume: Long-time press or button, To increase or decrease the volume.
- Pause: Short-time press button again, Enter into pause state, The Led is blue and blinking.
- Off: Long-time press button again, To stop playing, The Led light is black out.

### The Vidicon model Operation:

- In MP3 state, short-time press the Model button two times, The Led is red on, Enter into Vidicon (or Camera) state, short-time press button, The Led is red and blinking, Enter into video recording.
- Stop video recording: Short-time press button again, To stop video recording, Enter into save the video file as AVI format into "VideoRecord" folder.
- Playing video record: Connect sunglasses to the computer with the USB cable. The computer will find the removable disk and "VideoRecord", double-click the video file.

### The Camera model Operation:

- Tin Vidicon state, short-time press button, The Led is red and blinking, after hear a "click" sound from earphone, The photo shooting is finished. Save the photo in "CapturePhoto" folder.
- Check Photo: Connect sunglasses to the computer with the USB cable. The computer will find the removable disk and "CapturePhoto", double-click the photo file.

3

## The Lan PC camera function:

- The first time using: Press holding the Model button at first, Connect sunglasses to the computer with the USB cable, When the Led light is blue on, Release Model button, The computer ask you to install CD driver for Lan PC camera, Please according to computer's demand to install, Then can be to Lan PC camera function.
- The second time using: No need install driver again, Just press holding the Model button, Connect sunglasses to the computer with the USB cable, Release Model button, Then can be to Lan PC camera function.

## The FM radio model operation: (87~108MHz or 76~90MHz)

- In MP3 model state, Short-time press the Model button one times, The Led light is green, Enter into FM state.
- Automatically searching: Short-time press button, automatically search the FM stations, Then stop automatically after select the stations.
- Manually searching: Short-time press or button, manually search the FM stations up and down, the interval is +/-0.1MHz. In any state, Return to FM state again, system keep the memory of station selected at the last time.

### USB model function:

- 1) Connect the computer by the USB.
  - System requirement: Above Win98, no need CD driver.
  - Connect sunglasses: Connect sunglasses to the computer with the USB cable. The computer will find the "removable disk".
  - Can download the MP3 file from PC or others.
  - Copy or Delete: Can copy or delete the file of MP3, Video record, Photo, voice record.
- 2) Recharging by USB function:
  - When the voltage is lower than 3.5V, the Led will be off after 5 seconds later, the system will turn off automatically. Usually, the charging time is more than 2.5 hours.
  - Charging by adapter (AC110~220V): The red and green lights of adapter is on, when the lights of adapter turn green, after half hour then the battery is full.
  - Charging by computer: Charging by the USB port of computer, the glasses is charging automatically and green light is on.

4

- Charging by Car USB adapter (Optional): The red light of car adapter is on, when the light of car charger turn green, after half hour then the battery is full.



### Notice:

- Don't use it in the very hot, cold, dusty and damp environment, please it in right way and maintain it frequently.
- Don't let it rub and bump with the hard objects, otherwise it will probably cause some scratch with surface, battery's falling or damage of other hardwares.

### Please recharge in the below situations:

- a) When it is turned on, it turn off automatically, turn it again, and then it turn off very soon automatically.
  - b) The operate buttons have no response.
- Notice: When voltage is lower than 3.5V, Led display will extinct after 5 seconds later, then the system will turn off automatically.
- In case of static, please avoid using it in very much dry environment.
  - When formatting or downloading, don't stop the connection suddenly, Otherwise it will cause the mistake with the program.
  - When it is used as a movable hard disk, please store and reduce the files according to the correct managing and operating way of the files, we will not be responsible for any loss of the files caused by wrong operations.

### Trouble Shooting:

- Power off: Ensure the power is turn on.
- No sound in the Earphone: Ensure the earphone is clear, the damaged Mp3 file can cause different degree noise, even if can't play music, ensure the files are in full.
- Can't download music and other files: Check whether the USB wire is damaged or have a good connection, check whether the disk driving

5



process is installed or whether there are blank informations.

- Can't play the video recording files: Check whether install the WMP, or other software play.

Product Specifications:

- Photo storage: 8000 photos /1GB ; 16000 photos /2GB ; 32000 photos /4GB; 64000 photos /8GB
- Video storage:AVI format (128kbps) 120min/1GB; 240min/2GB; 480min/4GB; 960min/8GB
- Music storage:WMA format (64kbps) 32hours/ 1GB; 64hours/ 2GB; 128hours/4GB; 256hours/8GB MP3 format (128kbps) 16hours/1GB;32hours/2GB;64hours/4GB; 128hours/8GB
- Battery life: 2.5 hours ( Vidicon); 10 hours (camera 1photo/second); 5 hours (playing Mp3);2.5 hours (playing Video)
- Battery: 280mAh/3.7V
- Earphone output: 5mw+5mw
- Working temperature: -5°C +50°C

Accessories :

1. Black glasses box; 2. Glasses cloth; 3. Power adapter; 4. Antenna;
5. User's manual ; 6. USB cable; 7. CD driver.



Black glasses box



Glasses cloth



Power adapter



Antenna



User's manual



USB cable



CD driver

